

Product Specification

Version: 02:00

Date of issue: 20/05/2016

Date of revision: 20/06/2016




8L PAL MAXI 8 Wet/Dry Wipe Dispenser

Product Description

Product Name	8L PAL MAXI 8 Wet/Dry Wipe Dispenser
Product Code	X66000
Material	Rigid Plastic
Colour	White/Blue
Weight	1kg



Dimensions (mm)

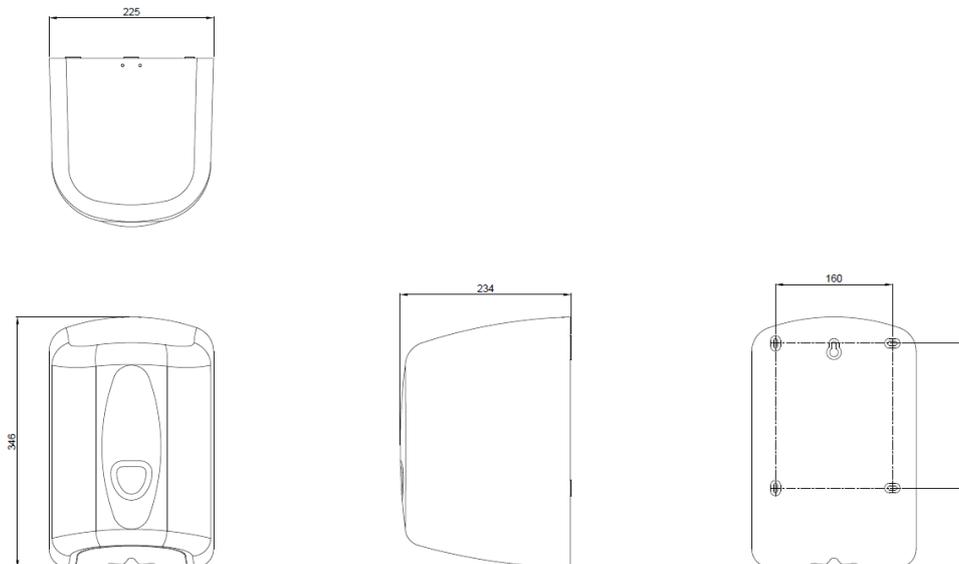

Packaging

Quantity	1 Dispenser per outer case
Case Dimensions	230 x 228 x 350mm
Case Weight	1.25kg (with dispenser)
Colour	Brown
Barcode	5025254041017

This data sheet complies with REACH Regulation (EC) N° 1907/2006 - N° 453/2010)
Pal International Limited, Bilton Way, Lutterworth, Leicestershire, LE17 4JA, United Kingdom
Telephone: +44 (0) 1455 555 700 Fax: +44 (0) 1455 555 755 Email: info@palinternational.com

Fitting instructions



Step 1

Open the dispenser by placing the opening tool into the two holes on top of the dispenser and pushing down as indicated in the image.

Step 2

Mark the desired wall, using the four corner holes as a guide, affixing the dispenser with the screws provided.



Step 3

The dispenser is now ready to dispense both wet and dry wipes.

Dispensing wet wipes




Step 1

Open the dispenser by placing the opening tool into the two holes on top of the dispenser and pushing down as indicated in the image.

Step 2

Place the Pal refill bag on the dispenser platform, open the refill bag at the top and thread the wipe through the silicon insert at the top of the dispenser. The opening tool may be used to aid in the threading through of the wipe.

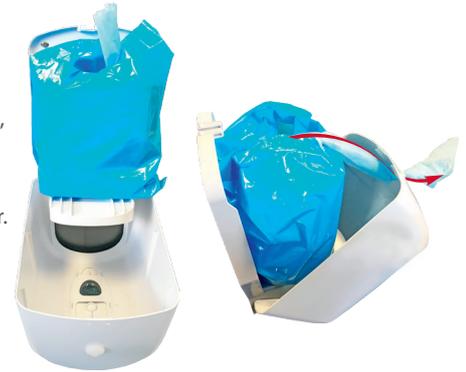

Step 3

Close the dispenser. You are ready to dispense Pal wet wipes.

Dispensing dry wipes

Step 1

Open the dispenser by placing the opening tool into the two holes on top of the dispenser and pushing down as indicated in the image.



Step 2

Thread the Pal dry wipes from the centre of the roll, through the opening at the bottom of the dispenser. Place the dry wipes log on to the platform.

Step 3

Close the dispenser. You are ready to dispense Pal dry wipes.

